



Remora

Description

Remora remote heads deliver reliable emergency illumination and operate on a wide 6–24 VDC input range, making them compatible with most central emergency power systems. They are ideal for corridors, stairwells, and open areas where focused, code-compliant egress lighting is required.



INSTRUCTIONS

1, EXTERNAL

This series is constructed of high impact thermoplastic .Clear PC lens and aluminum reflector provide bright illumination. Adjustable swivel locks the head in position. Standard canopy is designed to mount directly to typical electrical junction boxes .

2, MECHANICAL




| Model Number | Input Ratings | | |
|---------------|---------------|-------------|------|
| | Vdc | A | W |
| CM-201 F-1W | 6-24V | 0.05-0.25A | 1.2W |
| CM-202 F-2W | 6-24V | 0.10-0.49A | 2.5W |
| CM-202 F-2x2W | 6-24V | 0.10-0.49A | 4W |
| CM-201 F-2W | 6-24V | 0.09-0.40A | 2.2W |
| CM-202 F-4W | 6-24V | 0.18-0.80A | 4.4W |
| CM-201 F-3W | 5-24V | 0.13-0.60A | 3.0W |
| CM-202 F-6W | 5-24V | 0.26-1.20A | 6.0W |
| CM-201 F-5W | 5-24V | 0.95-0.22A | 5W |
| CM-202 F-2x5W | 5-24V | 1.89-0.43A | 10W |
| CM-201 F-7W | 5-24V | 1.40-0.31 A | 7W |
| CM-202 F-2x7W | 5-24V | 2.85-0.60A | 14W |






Remora

3, SIZE

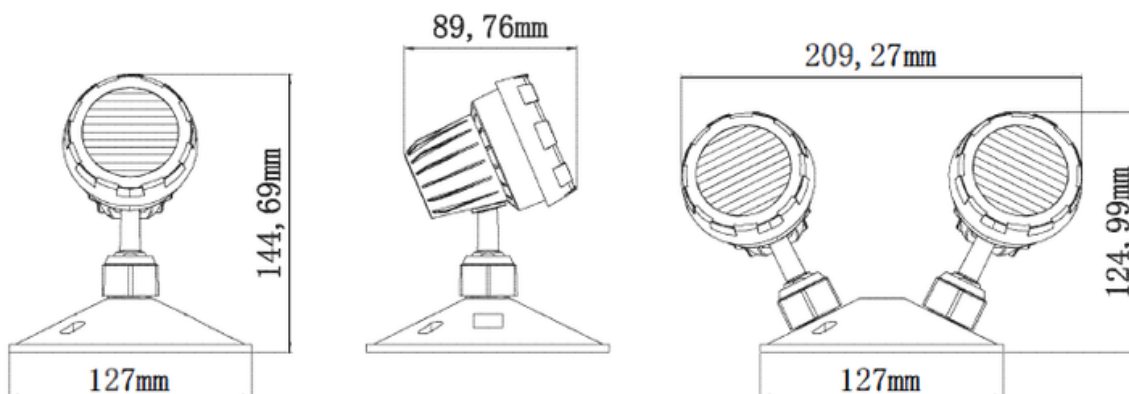

4, INSTALLATION LOCATOR

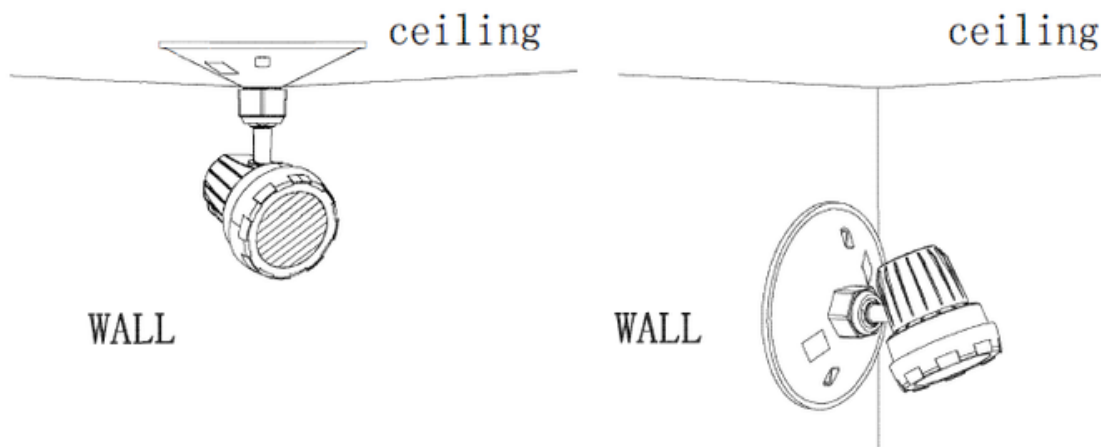

5, ATTENTION

5,1:IMPORTANT SAFETY GUARDS

When using electrical equipment, basic safety precautions should always be followed, including the following:

- 5,1.1. Read and follow all safety instructions.
- 5,1.2. Do not let power cords touch hot surface.
- 5,1.3. Do not install near gas or electrical heater



Remora

- 5.1.4. The use of accessory equipment not recommended by manufacturer, may cause an unsafe condition, and will void the unit's warranty.
- 5.1.5. Do not use this equipment for other than its intended purpose.
- 5.1.6. Servicing of this equipment should be performed by qualified service personnel.
- 5.1.7. Save these instructions for future reference.
- 5.1.8. Servicing of this equipment should be performed by qualified service personnel.
- 5.1.9. Do not use this equipment for other than its intended purpose.
- 5.1.10. Do not use outdoors.

5.2: OPERATION INSTRUCTIONS

5.2.1, INSTALLATION (Fig.1)

- (1): Make wires connections. Observe polarity (if required); connect the lamp to the DC supply wires; positive and negative are identify with labels on each wire (when indicated).
- (2): Install the canopy to the Junction Box with the Mounting Screws (not included).
- (3): Install the lamp(s) gently to avoid breaking the pins.
- (4): Apply power.

5.2.2, HEADS ADJUSTMENT(Fig.2)

Rotation - To rotate the heads, unscrew the set nut of the base attach under the canopy, enough to let you rotate the heads to the desire position. Tighten the set nut gently to fix the position of the heads.

WARNING! Tight the set nut too hard can break the head's feet and alternate the efficiency of the product.

Tilt - To tilt the heads, hold and tilt up or down to the desire position.

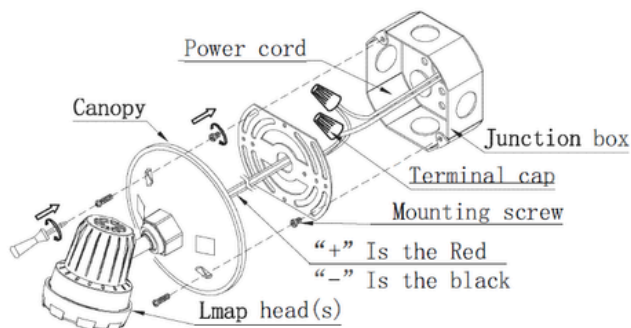


Fig. 1

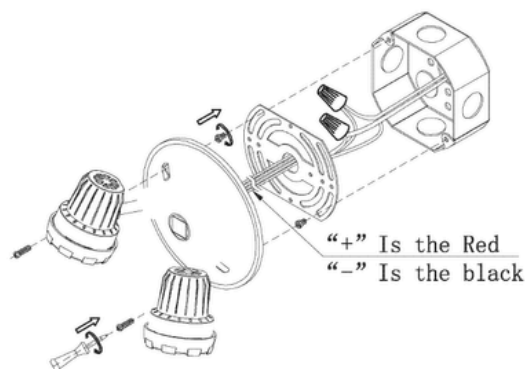


Fig. 1

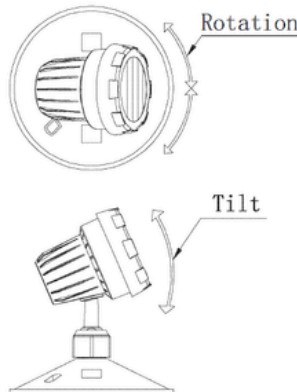


Fig. 2